

CLEANING: 1

For the oven to operate at peak efficiency, the cavity, door and air filters and grease filter must be kept clean.

A daily cleaning routine will ensure that you comply with the required hygiene standards and will help to maintain and prolong the efficiency of your oven.

Follow the SAFETY INSTRUCTIONS at the beginning of this manual.



WARNING: DO NOT use caustic cleaners on any part of the oven or oven cavity as it will cause permanent damage to the Catalytic Convertors

- **ALWAYS** switch off at the electrical supply before cleaning
- Complete **COOL DOWN** procedure and allow the oven and accessories to cool before commencing cleaning
- As required wipe out spillages with disposable paper wipes
- **NEVER** use steel wool, knives or harsh abrasives on any part of the oven



As with all electrical appliances, it is wise to have the electrical connections inspected periodically.

Faults arising from neglect or misuse including use without clean filters in place are not covered by the guarantee. Service visits as a result of such faults will be chargeable.



DO NOT use the oven without clean air filters and cavity grease filter in place

START UP: OVEN COATING PROCEDURE (clean, cold oven)

1. With the oven clean and cold, spray Merrychef Oven Protector onto the sponge



2. Spread Oven Protector lightly onto all internal surfaces of the oven



3. Spread Oven Protector lightly onto the internal surface of the oven door



4. Switch the oven ON when the oven has reached operating temperature it will take 30 minutes to cure the Oven Protector.

Note: oven protector turns light brown when cured

CLEANING: 2

COOL DOWN PROCEDURE: (30 minutes approx.)

Equipment :- Cooling tray filled with Ice.

Hot surface
Hazard



1. With the Oven hot, press the **COOL DOWN** pad on the control panel to disable heating and start the cool down cycle.




2. Taking all necessary precautions place a suitable heaped container of ice, into the cavity.

COOL DOWN MODE
PLACE LOAD IN CAVITY
AND PRESS START
start >>



3. Close the door and Press function key to **START** the cooldown cycle.

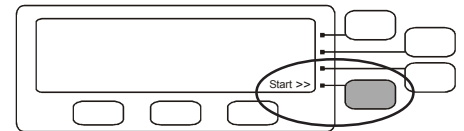

4. The oven now cools the oven cavity. This process will take approximately 30 minutes.

COOL DOWN MODE
OVEN HOT
PLEASE WAIT

5. Wait until the message below is displayed.



Turn oven off
and ensure
Air Filters are clean

6. Switch the oven **OFF**.
- The oven is now ready for cleaning.
See: CLEANING INSTRUCTIONS.



CLEANING: 3

- **ALWAYS** switch off at the electrical supply and allow oven to cool before cleaning
- **CAUTION:** Allow the oven and accessories to cool before commencing cleaning



WARNING: DO NOT use caustic cleaners on any part of the oven or oven cavity as it will cause permanent damage to the Catalytic Convertors

Equipment: Merrychef oven cleaner, Merrychef Oven Protector, heat proof gloves, protective rubber gloves, non-abrasive nylon scrub pad, cleaning towel and cloths, eye protection and dust mask (optional)

COLD OVEN: CLEANING INSTRUCTIONS (following cool down)

CAUTION: Wear protective rubber gloves when cleaning the oven

Oven Parts and filters & Oven Cavity

Wash all parts in warm soapy water. Wash off using a clean cloth and plenty of clean, warm water. Dry using a fresh, clean cloth.


Remove air filters both sides




Remove the rack and lift out bottom impinger plate



Remove top impinger plate
Undo fasteners

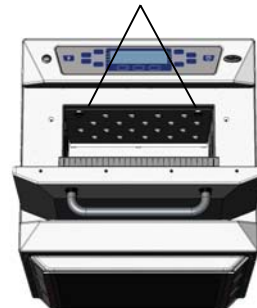

To remove grease filter push down and lift out

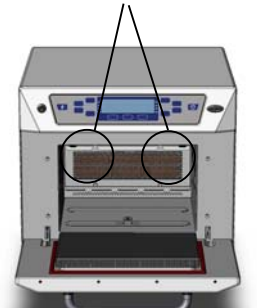

If the door seals are damaged, the oven must be repaired by an approved Servicer.

DO NOT spray directly into the fan opening at the rear of the oven

1. Wear protective rubber gloves and protective glasses carefully spray Merrychef Oven Cleaner onto the internal surfaces of the oven except door seals. **DO NOT** spray directly into the fan opening at the rear of the oven



2. For difficult areas leave to soak for 10 minutes. Leave the oven door open during cleaning. Use a non-abrasive nylon scrub pad/sponge to clean all internal surfaces and the inside of the door.




3. Wash off using a clean cloth and plenty of clean warm water to rinse top, sides and back of oven. Dry using a fresh clean cloth or paper towel. Wipe the outside of the oven with a damp cloth.



4. Replace clean oven parts

Grease Filter*
Top plate*
Bottom plate*
Air filters x2

DO NOT USE TOOLS

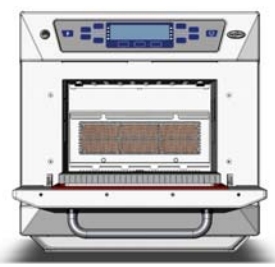

DO NOT use the oven without clean air filters and cavity grease filter in place

DO NOT USE TOOLS

*When replacing impinger plates and the cavity grease filter use firm finger pressure to tighten fasteners **DO NOT** USE TOOLS