

Merrychef Microcook Microwave Oven

The Microcook range are high powered commercial Microwave Ovens



MAIN DESIGN FEATURES

- No Turntable - All parts of the cavity can be used.
- Keypad - Set time, and to use pre-programmed cooking cycles.
- Time Display - Displays remaining cooking time.
- Air Filter - Cleans air to avoid degradation of internal components.
- ***Must be kept clean.***
- Standby - Oven fans and Cavity Bulb switch off after five minutes if oven not used.

MAIN OPERATIONAL POINTS

- Follow the cooking instructions exactly.
- Keep oven clean at all times - fresh spillages are easier to remove.
- ***DO NOT*** obstruct air inlets - the oven will overheat if this happens.

Merrychef Microcook Microwave Oven

Cleaning Instructions

EQUIPMENT



SUITABLE GLOVES



SUITABLE EYE PROTECTION




MICROWAVABLE BOWL



HOT WATER



CLEAN CLOTH

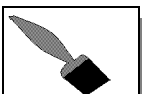

CLEAN BRUSH

HEALTH & SAFETY

ALWAYS wear protective clothing as specified.
See COSHH Data Sheet for more information.

ALWAYS switch off at the mains.
NEVER use steel wool, knives or harsh abrasives on any part of the oven.
As with all electrical appliances, it is wise to have the mains connections inspected periodically.

METHOD

Air Filter – Ease the filter from the top of the rear panel. Rinse in warm soapy water. Dry with cloth and clip back firmly into position. **NEVER use the oven without a clean air filter in position.**

Spare filter elements are available in packs of 10 from Merrychef, part number 31Z1068.

Cavity – Wipe down the sides and floor of the cavity with a damp cloth. Gently wipe the ceiling. **Take care not to press upwards as this could damage the concealed stirrer fans.** To remove stubborn stains, heat at least 1.5 litres of water in a suitable container and boil for 9 minutes to create steam which will loosen the food particles.

Door – Lift the door up and out of the channels. Wipe door and seals with a damp cloth. **NEVER IMMERSE DOOR IN WATER. Examine the doors for signs of wear or damage.** (Refer to SAFETY INSTRUCTIONS IN USER GUIDE) Replace using both hands to slot the door back onto its channels and slide down firmly.

Control Panel and Exterior Surfaces – Wipe down regularly with a damp cloth.

HOW TO PROGRAM

Press and hold the “P” pad until the P appears and the colons in the time display flash.


Now enter:

- The time
- And the power.
- Followed by a number key where you wish the program to be stored: e.g. 1.

Faults arising from neglect or misuse are not covered by the Manufacturer’s guarantee. Service visits as a result of such faults will be chargeable.





In case of fault,
please contact Merrychef on
01252 371000

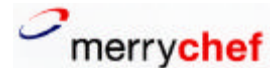

Merrychef Microcook Microwave Oven

Error Codes and Diagnostics

The Merrychef Microcook will identify some of the most common problems by flashing an error message code in the time display window.

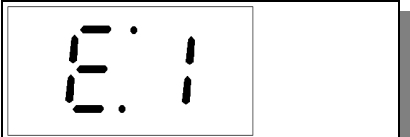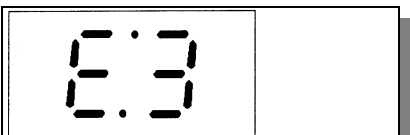	<ol style="list-style-type: none"> 1 Door not fully shut. 2 Possible electrical fault 	<p>Close door fully.</p> <p>Log service call.</p>
	<ol style="list-style-type: none"> 1 No time has been set. 2 Invalid time has been set. 3 Invalid program has been set. 	<p>Set a time.</p> <p>Set a valid time.</p> <p>Use call-back to check program.</p>
	<p>Display shows 0:00 but the cavity light and cooling fans do not operate</p> <p>Control panel lights do not operate with oven connected to electrical supply</p>	<p>Oven has gone into 'stand-by' mode, press any pad to re-start</p> <ol style="list-style-type: none"> 1. Check oven is connected to electrical supply 2. Check fuse is correct value and in good order 3. Call Merrychef Service Dept.
<p>Please remember – No servicing or repairs should be carried out other than by an approved Service Engineer</p>		