

# Merrychef Microcook Microwave Oven

*The Microcook range are high powered commercial Microwave Ovens*



## MAIN DESIGN FEATURES

- No Turntable - All parts of the cavity can be used.
- Keypad - Set time, and to use pre-programmed cooking cycles.
- Time Display - Displays remaining cooking time.
- Air Filter - Cleans air to avoid degradation of internal components.  
- ***Must be kept clean.***
- Standby - Oven fans and Cavity Bulb switch off after five minutes if oven not used.

## MAIN OPERATIONAL POINTS

- Follow the cooking instructions exactly.
- Keep oven clean at all times - fresh spillages are easier to remove.
- ***DO NOT*** obstruct air inlets - the oven will overheat if this happens.

# Merrychef Microcook Microwave Oven

## Cleaning Instructions

### EQUIPMENT



SUITABLE GLOVES



 
SUITABLE EYE PROTECTION




MICROWAVABLE BOWL



HOT WATER



CLEAN CLOTH

 

CLEAN BRUSH

### HEALTH & SAFETY

**ALWAYS** wear protective clothing as specified.  
See COSHH Data Sheet for more information.

**ALWAYS** switch off at the mains.  
**NEVER** use steel wool, knives or harsh abrasives on any part of the oven.  
As with all electrical appliances, it is wise to have the mains connections inspected periodically.

### METHOD

**Air Filter** – Ease the filter from the top of the rear panel. Rinse in warm soapy water. Dry with cloth and clip back firmly into position. **NEVER use the oven without a clean air filter in position.**

Spare filter elements are available in packs of 10 from Merrychef, part number 31Z1068.

**Cavity** – Wipe down the sides and floor of the cavity with a damp cloth. Gently wipe the ceiling. **Take care not to press upwards as this could damage the concealed stirrer fans.** To remove stubborn stains, heat at least 1.5 litres of water in a suitable container and boil for 9 minutes to create steam which will loosen the food particles.

**Door** – Lift the door up and out of the channels. Wipe door and seals with a damp cloth. **NEVER IMMERSE DOOR IN WATER. Examine the doors for signs of wear or damage.** (Refer to SAFETY INSTRUCTIONS IN USER GUIDE) Replace using both hands to slot the door back onto its channels and slide down firmly.

**Control Panel and Exterior Surfaces** – Wipe down regularly with a damp cloth.

### HOW TO PROGRAM

Press and hold the “P” pad until the P appears and the colons in the time display flash.

 
Now enter:

- The time
- And the power.
- Followed by a number key where you wish the program to be stored: e.g. 1.

**Faults arising from neglect or misuse are not covered by the Manufacturer’s guarantee. Service visits as a result of such faults will be chargeable.**





In case of fault,  
please contact Merrychef on  
**01252 371000**



# Merrychef Microcook Microwave Oven

## Error Codes and Diagnostics

  The Merrychef Microcook will identify some of the most common problems by flashing an error message code in the time display window.

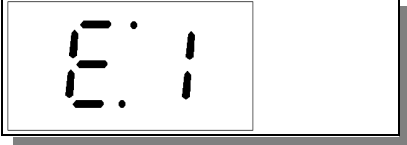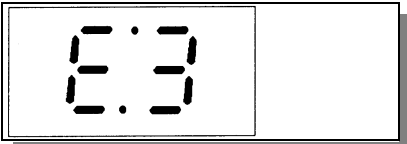	<ol style="list-style-type: none"> <li>1 Door not fully shut.</li> <li>2 Possible electrical fault</li> </ol>	<p>Close door fully.</p> <p>Log service call.</p>
	<ol style="list-style-type: none"> <li>1 No time has been set.</li> <li>2 Invalid time has been set.</li> <li>3 Invalid program has been set.</li> </ol>	<p>Set a time.</p> <p>Set a valid time.</p> <p>Use call-back to check program.</p>
	<p>Display shows 0:00 but the cavity light and cooling fans do not operate</p> <p>Control panel lights do not operate with oven connected to electrical supply</p>	<p>Oven has gone into 'stand-by' mode, press any pad to re-start</p> <ol style="list-style-type: none"> <li>1. Check oven is connected to electrical supply</li> <li>2. Check fuse is correct value and in good order</li> <li>3. Call Merrychef Service Dept.</li> </ol>
<p><b>Please remember – No servicing or repairs should be carried out other than by an approved Service Engineer</b></p>		